



INSTRUCTIONS FOR USE - ENGLISH

FAS²M

METALLOGRAPHY
CAMEO[®]DISK and TOUCHLAM[®] SYSTEMS

**LAM PLAN magnetic rigid disc
with non-adhesive patented coating**

1. Description of LAM PLAN FAS²M disc

The FAS²M disc is a patented support adaptable by magnetic fixing on all polishing machines of metallography. It permits easy sticking and unsticking of the adhesive paper or the pre-polishing discs and polishing adhesive cloths.

∅	Designation	References
200 mm	LAM PLAN FAS ² M disc	05 FAS2M 20
250 mm	LAM PLAN FAS ² M disc	05 FAS2M 40
300 mm	LAM PLAN FAS ² M disc	05 FAS2M 50
400 mm	LAM PLAN FAS ² M disc	05 FAS2M 80

2. Installation and use of the LAM PLAN FAS²M disc

The wearing of gloves is recommended to install the FAS²M disc.

Use the FAS²M disc with a clean and dry magnetic plate.

Place the FAS²M disc on the magnetic support plate and apply a light pressure to settle the contact.

Mount the plate on the polisher and use it as a standard polishing support.

Important Note

Both sides of the FAS²M are active, when one side is damaged or worn you can turn it over to use the other side.

3. Maintenance of the LAM PLAN FAS²M disc

In order to resist to more than hundreds operations of sticking and unsticking discs, it is important to use carefully the FAS²M disc.

It should only be in contact with the adhesive face of the abrasive papers and of the pre-polishing discs and polishing cloths.


Avoid blows, scratches or chemical aggression that could damage your FAS²M disc as a deterioration of the surface would alter its properties and require its premature replacement.

For cleaning, use **water-based detergent or isopropyl alcohol, do not use any other solvent.**

WARRANTY

The batch number written on the identification label that is on all LAM PLAN FAS²M discs must be kept. This label can be stuck on the back of your support plate.

The batch number of the FAS²M disc must be mentioned on all correspondences.

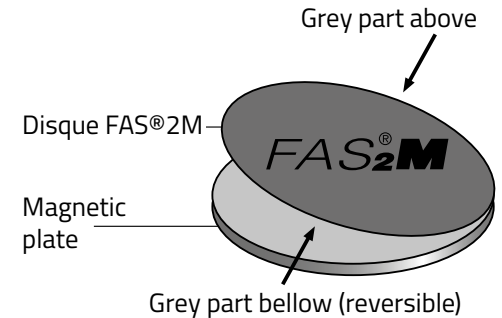

4. Use of LAM PLAN FAS²M on an aluminum or PVC plate

In order to use FAS²M on non-magnetic plates LAM PLAN recommends the use of the FMS disc.

The magnetic FMS disc can be glued on all types of plates. It is also available as an FMS tray and fits all existing machines.

Thus your tray becomes compatible with magnetic supports.



1. Description of LAM PLAN FAS²M disc
2. Installation and use of the LAM PLAN FAS²M disc
3. Maintenance of the LAM PLAN FAS²M disc
4. Use of LAM PLAN FAS²M on non-magnetic plate



CODE EMPL FAS2M